 
 
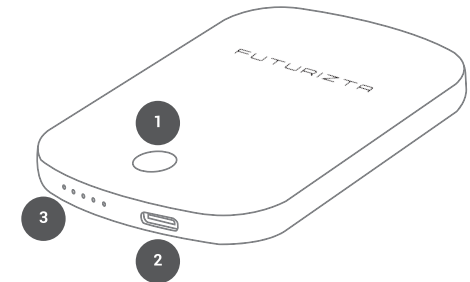 



# GUIDE TO THE PIXY GO

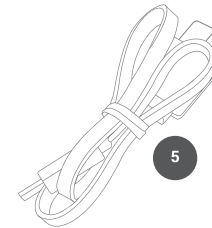

1. Power button
2. Type C output/input port
3. LED Indicators
4. Extruded wireless magnetic dock
5. Type-C charging cable

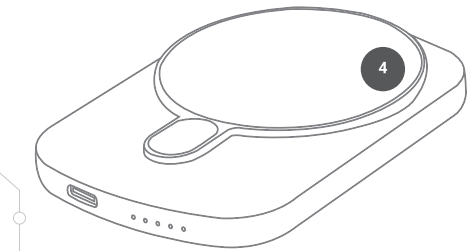
 
## 1 CHECKING REMAINING CHARGE

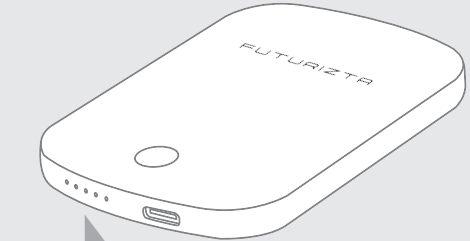


- ○ ○ ○ ○ < 25%
- ● ○ ○ ○ 25% – 50%
- ● ● ○ ○ 51% – 75%
- ● ● ● ○ 76% – 100%

- ○ ○ ○ ● Red - Device not detected
- ○ ○ ○ ● Green - Device detected

**LED indicator lights** Indicate the remaining battery charge that the power bank contains. Press the **POWER** button to check battery status. There are 4 LEDs with each LED representing 25% of charge.

**The 5th LED** serves as a status indicator, press the button once and if there are no wireless charging devices connected, the status indicator remains **red**. When connected with a compatible wireless charging device, the status indicator will turn **green**.


## 2 CHARGING YOUR PIXY GO

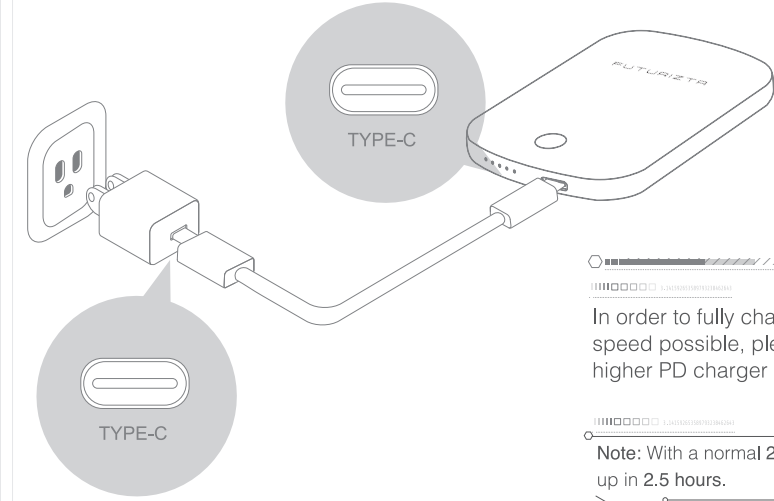

In order to fully charge up your Pixy Go at the fastest speed possible, please use a compatible **18W** or higher PD charger to fast charge it.

**Note:** With a normal **2.4A** charger, Pixy Go will charge up in **2.5 hours**.

## 3 MAGSAFE AND QI WIRELESS CHARGING

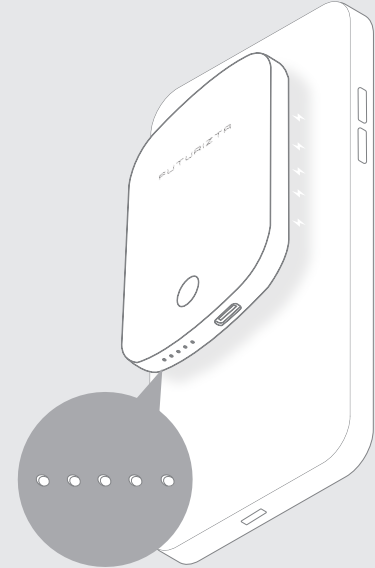

Click the power on button to turn on wireless charging. The status **LED indicator** will turn from **red** to **green** when connected to a wireless charge compatible device.

- ○ ○ ○ ● Red - Device not detected
- ○ ○ ○ ● Green - Device detected

**Note :** Pixy Go auto turns off when not used after a period of time however users have the option to manually turn Pixy Go off by pressing the power button twice.

## CONTACT FOR SUPPORT

Futurizta is a Tech Company that innovates gadgets from listening and tending to consumer's needs. We hold on to a core belief that futuristic means to have more out of something simplistic. For more info or support, please visit our website at [futurizta.com](http://futurizta.com) and use our pop-up chat box or simply reach us at [info@futurizta.com](mailto:info@futurizta.com).

All rights reserved. Any information printed here is subject to change without notice. Pixy Go and the Futurizta Tech Logo are trademarks of Futurizta Tech Pty Ltd.

f FUTURIZTATECH

Instagram FUTURIZTATECH.OFFICIAL

 
Twitter FUTURIZTA

Website FUTURIZTA.COM



This symbol, affixed to the product or its packaging, indicates that the product must not be processed as household waste. This product should be correctly disposed of according to your local guidelines for electrical and battery operated products. Correct disposal of the battery will avoid potential harm to the environment and human health. For further information regarding the recycling of this product, please contact your local waste recycling centre.

## 4 PASS-THROUGH CHARGING

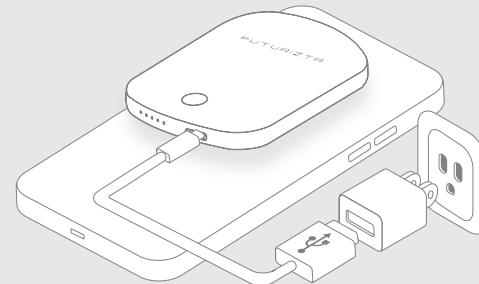

Pass through charging capability means Pixy Go can be recharged through its **Type-C** port while wirelessly charging other devices.

## 5 DUAL OUTPUT & 20W PD CABLE CHARGING



With a compatible cable, Pixy Go supports up to **20W PD** output to fast charge your devices.

Pixy Go allows you to simultaneously charge **2 devices** through both wireless and cable charging at the same time with combined max output of **20W**.

## 6 FEATURES

- 15W Magsafe and Qi Compatible wireless quick charging.
- 20W PD Output : Supports QC4.0+ , PPS, QC3.0, FCP, Samsung Fast charge. Fast charge your compatible smartphone from 0-60% in just 30 minutes.
- 18W PD Input (USB-C): Fully charge your Pixy Go in 2 hours. Up to 2 x faster than standard powerbank.
- Dual Output: Charge 2 devices at once wirelessly and with cable charging via Type-C output.
- LED Indicators: A status LED indicator and 4 LED Indicators to display the available battery capacity.

 
## SPECIFICATION

Model Name:	PBG5000
Capacity:	5000 MAH
USB-C Output:	5V/2.4A, 5V/2.2A, 9V/2.2A, 12V/1.5A
Wireless Charging Output:	5W/7.5W/10W/15W
USB-C Input:	5V/2.4A, 5V/2.2A, 12V/1.5A
Size(cm):	9.4 x 6.6 x 1.3
Weight(g):	109

## 7 MAINTENANCE AND SAFETY

- To maximize Pixy Go's battery life span, we recommend fully charging it before first use.
- Store Pixy Go in a cool and dry place.
- Do not store power bank in hot or humid environment .
- Operating temperature should be between -10°C to 45°C. When charging a device, the power bank may feel warm, this is a normal operating condition and should not be cause for concern .
- We recommend charging and discharging Pixy Go at least once every 3 months.
- Do not dispose of Pixy Go in heat or fire .
- Do not clean Pixy Go with harmful chemicals or detergents .
- Misuse, dropping or excessive force may cause product damage. Using a damaged product is not advised.

FUTURIZTA

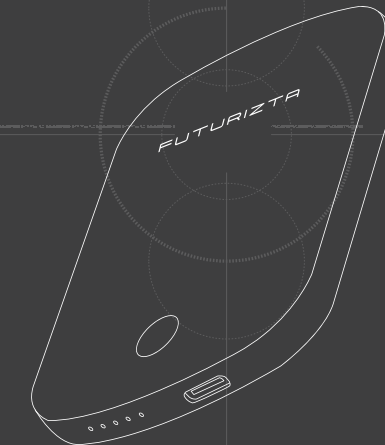

**PIXY GO**  
PACK LIGHT, GO FAST

THE FUTURE · CONNECTED