

CONTACT FOR SUPPORT

Futurizta is a Tech Company that innovates gadgets from listening and tending to consumer's needs. We hold on to a core belief that futuristic means to have more out of something simplistic. For more info or support, please visit our website at futurizta.com and use our pop-up chat box or simply reach us at info@futurizta.com.


All rights reserved. Any information printed here is subject to change without notice. Pixy Mini and the Futurizta Tech logo are trademarks of Futurizta Tech Pty Ltd.

- f FUTURIZTATECH
- T FUTURIZTATECH.OFFICIAL
- ₩ FUTURIZTA
- # FUTURIZTA.COM






This symbol, affixed to the product or its packaging, indicates that the product must not be processed as household waste. This product should be correctly disposed of according to your local guidelines it electrical and battery operated products. Correct disposal of the battery will avoid potential harm to the

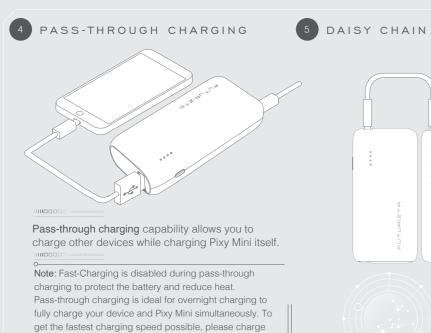

Pixy Mini and your devices separately.

 





- 20W Power Delivery (USB-C): Fast charge compatible devices from 0-60% in 30 minutes
- QC3.0 (USB-A) : Fast charge your compatible Android devices from 0-80% in 30 minutes
- Ultra-Light & Portable: Smaller than a credit card and weighs only 98g/3.45oz.
- 5000 mAh: Charge your phone 1 1.5 x time
- 18W PD Input (USB-C): Fully charge your Pixy Mini in 1.5 hours (3 x faster than standard powerbank)
- Dual Output: Charge 2 devices at once with Type-C for your modern devices and USB-A for your older devices. Size ·
- LED Indicator: 4 LED Indicators to display the available battery capacity.
- Low Power Mode: Smart integrated chip allow you to charge your low-powered devices fast and securely.

SPECIFICATION

Weight

Product name :	PIXY MINI	•	•	7
Model name :	PBX5000			f
Capacity:	5000 mAh / 3.7V	•		-
USB-C output :	5V/2.4A, 5V/2.2A ,9V/2.2A,			6
	12V/1.5A	•	•	t
USB-A output :	5V/2.4A, 9V/2A, 12V/1.5A			k
USB-C input :	5V/2.4A, 5V/2.2A , 12V/1.5A	•		/

7.5cm x 3.5cm x 2.5cm

2.9in x 1.18in x 1in

98G | 3.45oz

- Do not clean Pixy Mini with harmful chemicals or detergents.
- Misuse, dropping or excessive force may cause product damage. Using a damaged product is not advised.

7 MAINTENANCE AND SAFETY

- To maximize Pixy Mini's battery life span, we recommend fully charging Pixy Mini before first use.
- Store Pixy Mini in a cool and dry place.
- Do not store power bank in hot or humid environment
- Operating temperature should be between -10°c to 45°c. When charging a device, the power bank may feel warm, this is a normal operating condition and should not be cause for concern.
- We recommend charging and discharging Pixy Mini at least once every 3 months.
- Do not dispose of Pixy Mini in heat or fire

